

BATTERY



Inspection guideline (Replace if necessary)


Interval

check periodically

Purpose and Function

The battery is used to start the engine, and to provide electricity to operate other components of the automobile (audio systems, air-conditioner, headlights, etc.).

It also stores electricity generated by the alternators.

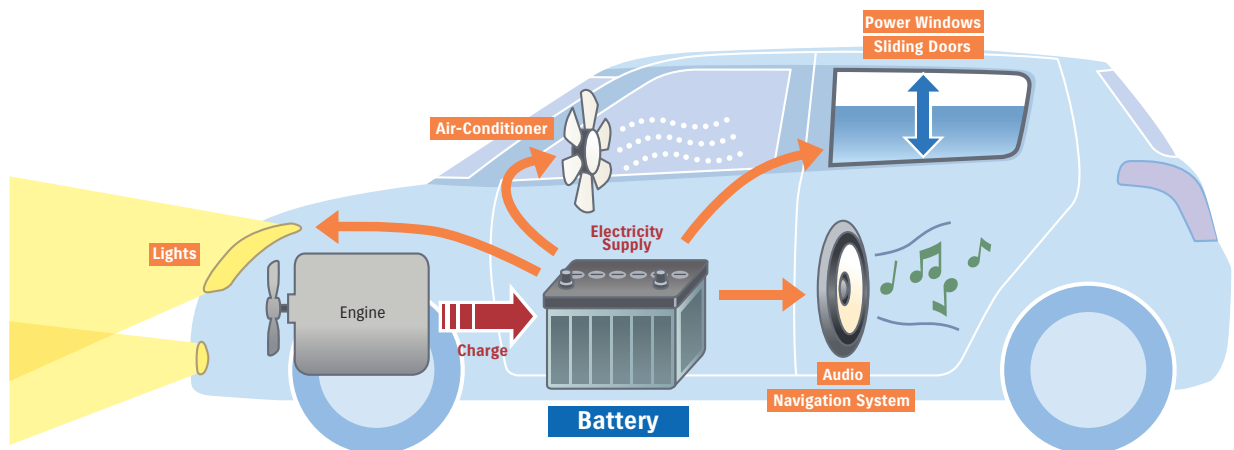

If overused without replacement ...

- The engine will not start.