



BRAKE PAD




Inspection guideline (Replace if necessary)

		Interval	
15,000 km	1 year		*whichever comes first

Purpose and Function

When the driver depresses the brake pedal, the brake pads are pressed against the brake disc. The friction force generated between the pads and disc acts to reduce the speed or bring the automobile to standstill.

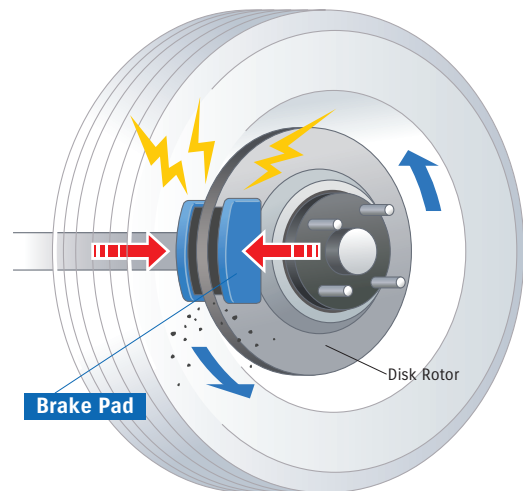

If overused without replacement ...

- Squeals occur while driving
- Brake fluid level drop cause brake system warning light comes on
- Braking force deteriorates
- Brake distance increases
- Brake discs can be damaged by worn brake pads, requiring costly repair

