

DRIVE BELT




Inspection guideline (Replace if necessary)

| | Interval | | |
|--------------------------|-----------|---------|------------------------|
| Severe driving condition | 15,000 km | 1 year | *whichever comes first |
| Normal driving condition | 45,000 km | 3 years | |

Purpose and Function

Drive belt is a part made of rubber, which works in conjunction with the engine. It leads engine power to generator, water pump, air conditioner compressor and power steering pump.

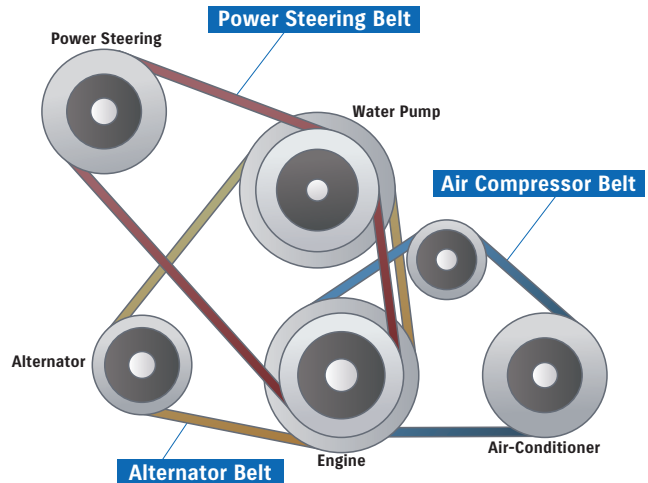

If overused without replacement ...

- **Abnormal noise**
- **Belt slipping**

If worn excessively, the drive belt cannot effectively transmit engine power to generator and compressor. If not replaced, it gets torn. As a result, engine cannot start because battery is not charged.